
For Platinum

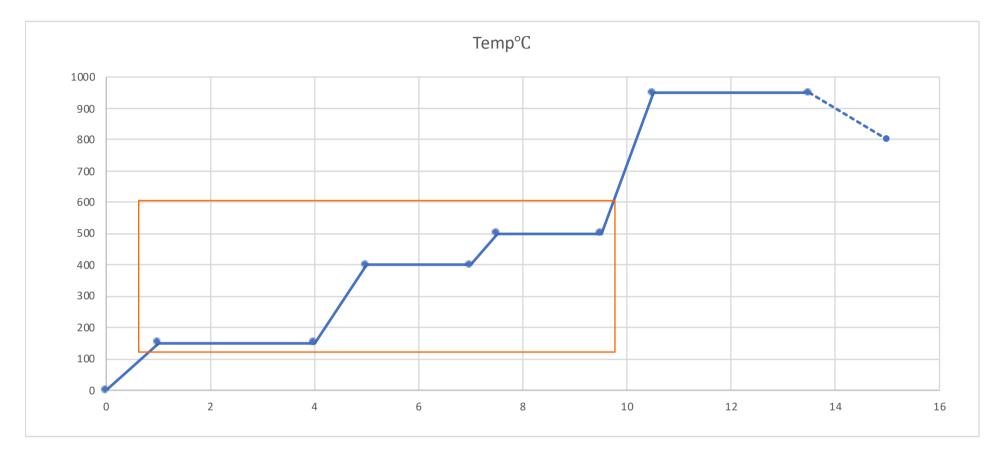

- Please follow the burn out pattern in the orange square for 3 hours at 150° C, 2 hours at 400° C, and 2 hours at 500° C.

 Otherwise, the temperature control you are currently using is fine.
- Adjust the mooring time at 390° C by about 20° C up or down in 10° C increments,
 depending on the individual variability of the electric furnace, according to the roughness of the plaster